UTILITIES LOCATION DIAGRAM 230 V. 50 Hz, 3.0 Amp SUITMATE® Unit

If applicable, the following instructions can be followed for a 230 V, 60 Hz, 4.3 A SUITMATE® unit.



This diagram is for reference only! It is not to be used as the sole reference for installation of the SUITMATE[®] unit. The installation instructions must be followed explicitly!



- 1) On wall locate center of ³/₈ inches (9.5 mm) hole for the upper center hole of the Wall Mount Bracket.
- 2) Draw a vertical line (down) from this mark to indicate the center of the lower mounting channel of the SUITMATE[®] unit.
- 3) Use given measurements to locate either or both locations for placement of internal utilities.
- 4) After the SUITMATE[®] unit is hooked over the upper bracket, move it side to side so the center hole in the bottom channel is over the vertical line drawn in Step 2.