


UTILITIES LOCATION DIAGRAM

115 V, 60 Hz, 8.6 A SUITMATE® Unit

WARNING!

This diagram is for reference only! It is not to be used as the sole reference for installation of the SUITMATE® unit. The installation instructions beginning on page 3 must be followed explicitly!

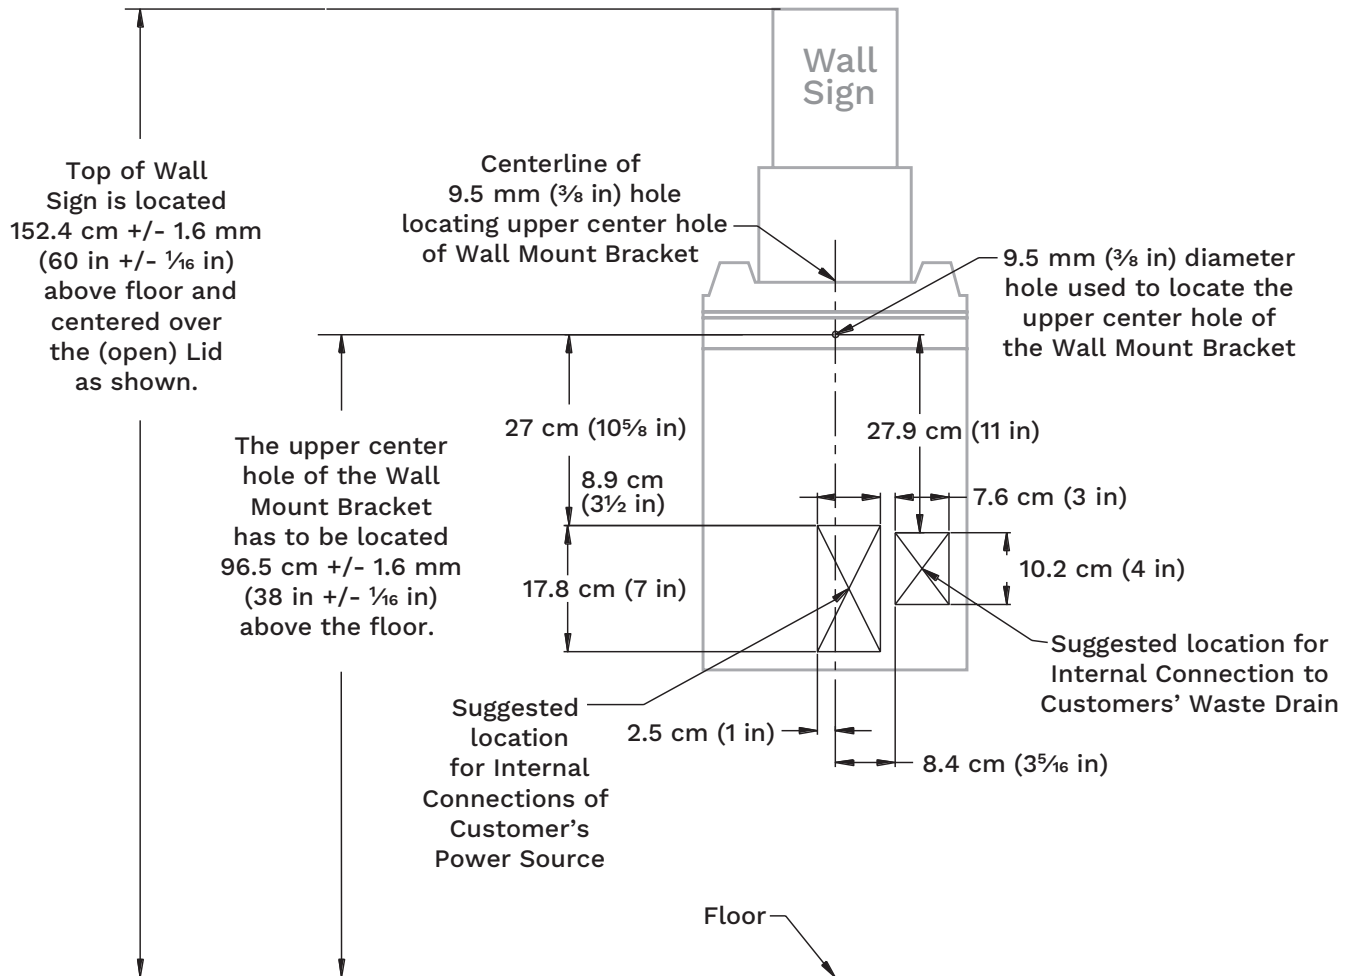

1. On the wall, locate the center of the 9.5 mm (3/8 in) hole for the upper center hole of the Wall Mount Bracket.
2. Draw a vertical line (down) from this mark to indicate the center of the lower mounting channel of the SUITMATE® unit.
3. Use given measurements to locate one or both locations for placement of internal utilities.
4. After the SUITMATE® unit is hooked over the upper bracket, move it side to side so the center hole in the bottom channel is over the vertical line drawn in Step 2.