

# OPERATING INSTRUCTIONS

115 V, 60 Hz, 8.6 A SUITMATE® Unit

For your safety, the directions to use this machine must be followed explicitly or may result in damage to swimsuits or personal injury.

## CAUTION!

***The appliance is not intended for use by persons (including children) with reduced physical and sensory capabilities or cognitive impairment, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.***

## SAFETY INSTRUCTIONS

1. LOOK! Make sure nothing is in the Basket.
2. Load one swimsuit only (weight of dry cloth not to exceed 0.4 kg or 0.88 lbs) with strings and/or padded portions first, pushing all material to the bottom of the Basket.
3. Make sure all material is at least 5 cm (2 in) BELOW TOP of Basket.
4. To start unit, close and hold Lid down firmly for 8 seconds.
5. Release pressure on Lid.
6. Lift Lid and ensure Basket has stopped spinning prior to removing swimsuit.
7. If machine vibrates excessively, release Lid, ensure Basket has stopped spinning, then rearrange the swimsuit and restart.

The owner of this SUITMATE® and Extractor Corporation are not responsible for any items damaged, or personal injury caused by improper usage of this equipment.