
UTILITIES LOCATION DIAGRAM

230 V, 50 Hz, 3.0 A SUITMATE® Unit

If applicable, the following instructions can be followed for a 230 V, 60 Hz, 4.3 A SUITMATE® unit.

WARNING! ***This diagram is for reference only! It is not to be used as the sole reference for installation of the SUITMATE® unit. The installation instructions must be followed explicitly!***

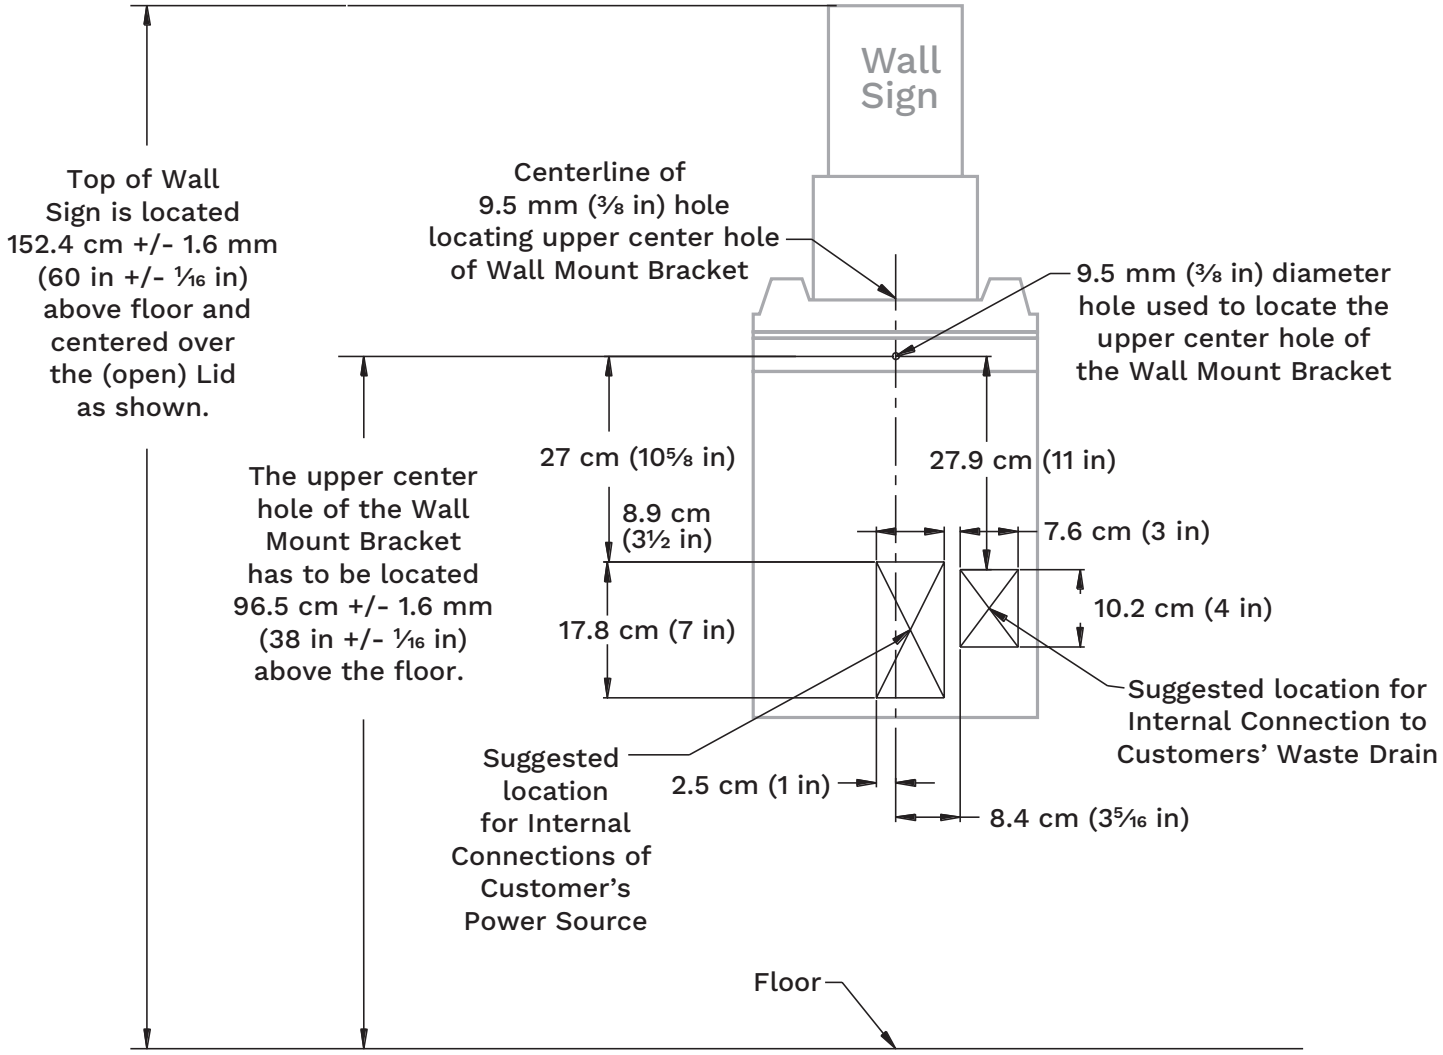

WARNING! ***Anchors in the drywall are not sufficient to mount the SUITMATE® unit. The unit should be mounted on a strong and secure structure such as a wall stud, concrete or cinder block wall.***

1. On the wall, locate the center of the 9.5 mm (3/8 in) hole for the upper center hole of the Wall Mount Bracket.
2. Draw a vertical line (down) from this mark to indicate the center of the lower mounting channel of the SUITMATE® unit.
3. Use given measurements to locate either or both locations for placement of internal utilities.
4. After the SUITMATE® unit is hooked over the upper bracket, move it side to side so the center hole in the bottom channel is over the vertical line drawn in Step 2.

©2026 Extractor Corporation